IX015

Guard Unit GL471 Quick Guide

Before configure, all device should be connected.

1. Installer setup

a. IP Address Setup

Set up correct IP address as below:

On monitor, tap "Settings" -> "Installer" -> Input installer password if required (66666666 by default) -> "IP Address"



IP address setup as below.

IP address		\leftarrow
IP assigned	DHCP&AUTO	O IP address
IP Address	192.168.243.101	Call_Nbr
IP Subnet Mask	255.255.255.000	🔑 Parameter
IP Gateway	192.168.243.200	O Upgrade
Address check		🖉 Onsite tools
		<u>ل</u>

IP assigned:

- STATIC, Static IP address by manually input all IP address configures.
- DHCP & Auto IP, Using DHCP address or if there is no router for DHCP will be Auto-IP automatically.

Address health check:

Tap to check this monitor's configured IP address is duplicate in the network or not.

"Error: IP exist!", IP address already assigned by other devices.

"Self IP address checking passed", IP address is unique in the network.

b. Address and Name setup

On monitor, tap "Settings" -> "Installer" -> Input installer password if required (66666666 by default -> "Call_Nbr"

		Installer		÷
		IP Address	192.168 ,3 43.103-D	S Call tune
	Monitor	Call_Nbr	GL0(2)	🚱 General
		Parameter	•	
		Upgrade		🔀 Manager
	Functions	Onsite tools		Ext.Unit
- @-	02-11-2020 07:55pm			ŵ

Address and name setup as below:

Call_Nbr		~
BD_Nbr	0000	IP address
GL_Nbr	2	Call_Nbr
Name	Name	🥬 Parameter
Global_Nbr	-	O Upgrade
Local_Nbr	-	2 Onsite tools
		۵

BD_NBR:

"0000": for common guard unit. Means the guard unit serve for all devices. "0001~8999": for building number, 0001 means 1st building/block, 2nd means 2nd...etc. means it serve only for this building

Name:

The "Name" input here will sync to other IX devices' calling list automatically.

Global_Nbr: Quick dial number for global calling.

Local_Nbr: Quick dial number for intra-building calling.

c. Link to IP camera

IP camera must be compatible with IX system.

Link guard unit to an IP camera, when guard unit calling to monitors, monitors will see the camera's view.

To link an IP camera with guard unit:

1. Add IP camera to guard unit, tap "settings" -> "Ext.unt" -> "IPC camera"



And tap "ADD" to add IP camera to list:

Add	÷
Add by search	ر Items
Add by manual	JS A
[192.168.243.100] IP-CAM1	13 Delete
	€ Edit name
	€ Sync
IPC list update 1 items	ŵ

Add by search: tap to add IP camera automatically, only suit for IP camera purchase from VTEC. **Add by manual:** adding IP camera by manual input IP address and login information.

2. Link one of the cameras with GL471.

Tap "Settings" -> "Installer" -> input installer password (6666666666666666666666666666767 -> 2nd Page -> "Video proxy"

Installer		÷	Others	< 02/02 R ²	÷
IP Address	192.168.243.103-D	Call tune	Upgrade code	-	
Call_Nbr	GL0000(2)	🐼 General	Upgrade source	-	
Parameter	ତ <u>୍</u>	7- Installer	Reboot timing if network erro	r 3	
Upgrade		💥 Manager	PTT&JPG on in divert	Disable	
Onsite tools		Ext.Unit	Video Proxy		
		ŵ			ŵ

Select camera from list to link to guard unit.

2. Daily Operation

a. Monitoring/Unlock

First time running GL471, please check the monitoring list at least one time.

Tap "functions" -> "Monitor"



As below:



Also, by tap on "Monitor" icon the main menu, could monitoring IP cameras and Doors.



Record a 10s video with SD card; Or snap 1 picture without SD card. Start audio talking with door station.

In this page, the monitoring will automatically switch to next device very 30s.

b. Call Monitors

Tap "functions" -> "Namelist"



to call.

Playback

Tap any monitor in the list to start a call.

c. Call GL471 from other devices

Door Station IX850

As below:

Tap "Keypad" in standby and input "00" or "Global_Nbr/Local_Nbr" to call local GL471. (addressed in same building)

Tap "Namelist" in standby and select "GL (1) IX471GL", the guard unit will always at the top of the list.



Monitor IX471/439

As below:

Tap "Intercom" -> "Guard Station" -> select GL471 to call.

÷	Intercom	÷	Guard Station
G→) Intercom	Namelist	A GS list	CGL (1) IX471GL 😡
	Innercall		
	Guard Station \mathbb{Q}^{1}		
	Intercom function [Enable]		
ŵ			



d. 2Easy App Forward

Download APP



APP Register

Make sure the monitor is online and cloud state is " $\sqrt{}$ " when standby. As below:

(·					• -	<u>.</u>	
1	aller 2002 46 st 774346 st 6 455 part 1							
1	ASSISTANT		SIP config	< 01/03 >	÷	IP config	< 01100 >	←
	PASTACIO		SIP enable	[Enable]	🗎 🔀 Manager			📋 🔀 Manager
	DOMAIN	Rottor	Divert account	0e001a42d26a 48998	<u> </u>			
	Form D		SIP server	47.91.88.33	<u> </u>			
	Wonter Dode		Re register	E C		LEI ASSAN	ANCESCINS III	•
		01-10-						
Į								
1		/						/

Setup monitor to divert calls

Tap "Functions" -> select "Divert call if no answer" or "Divert call always"

Monitoring form Mobile

Tap "monitoring icon", if there is only one door station available to check, APP will bring to video directly, otherwise please select door station to check.



7 / 7