

DMR11S – How to make a new Master and add or delete Keyfobs:

- 1. Turn the Outdoor Unit over and record the DIP settings (take a picture with your smartphone). Do this prior to any other steps.**
- 2. Reset all DIP switches into the down position.**
- 3. Short the Yellow and Black (EB- and EB+) on the Mulnex connector.**
- 4. Turn switch FOUR (4) UP, then DOWN, then back UP.**
- 5. Swipe NEW MASTER ADD and then swipe NEW MASTER DELETE.**
- 6. Unshort the Yellow and Black wires on the Mulnex connector.**
- 7. Now you are ready to delete or add new cards using your NEW ADD and DELETE cards.**
- 8. When done adding cards, reset the DIP switch settings.**