English

2-Wire Video Outdoor Station

User Manual



DT611/ID




DT611F/ID

Contents


1.Parts and Functions	1
2.Terminal Descriptions	1
3.Door Station Mounting	2
4. System Wiring and Electric Lock Connection	4
5. ID Card Registration	8
6.Unlock Operations	10
7.ID Setting of Door Station	10
8. Precautions	11
9. Specifications	11
10. Cables Requirements	12

1.Parts and Functions

 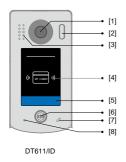






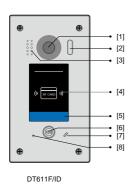






- [1] Camera lens
- [2] LED_CAM
- [3] Speaker

- [4] ID card window
- [5] Nameplate
- [6] Call button

[7] Microphone

[8] LED_POW

2.Terminal Descriptions

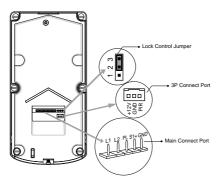


- Lock Control Jumper: To select the lock type.
- 3P Connect Port: It can be used as exit button port.
- Main Connect Port: To connect the bus line and the electronic locks.
 - **L1,L2:** Connect to the bus line, no polarity.


PL: External lock power input, connect to the power positive(power +).


\$1+,GND: Lock power connection port.


3. Door Station Mounting

DT611/ID Mounting

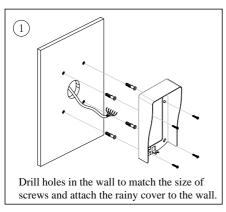


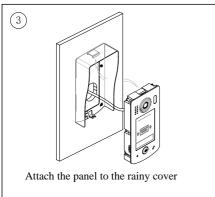


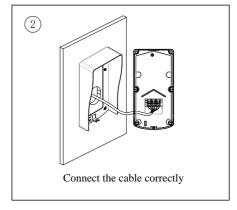


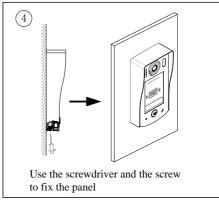


DT611F/ID Mounting

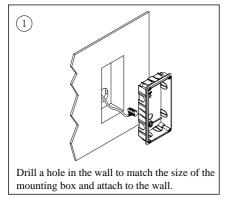

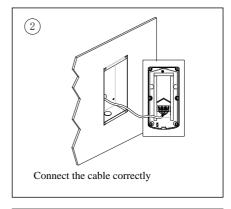


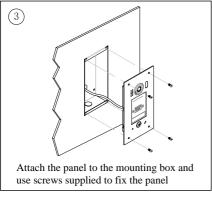

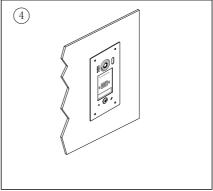


Placing Name Label

Use a screwdriver to unscrew the screw, and cock the host , then Placing Name Label.

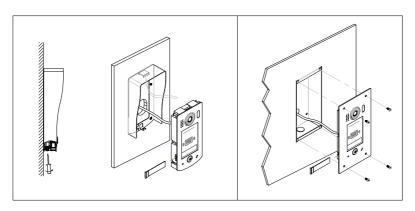

4. System Wiring and Electric Lock Connection

Basic Connection

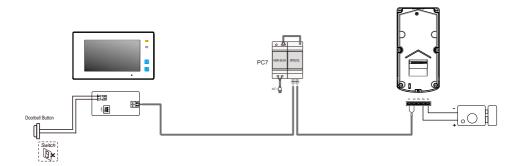


Electric Lock Connection

Door Lock Controlled with Internal Power

Note:


- Electronic lock of Power-on-to-unlock type should be used.
- The door lock is limited to 12V, and holding current must be less than 250mA.
- The door lock control is not timed from Exit Button(EB).
- The **Unlock Mode** Parameter of Monitor must be set to 0 (by default).

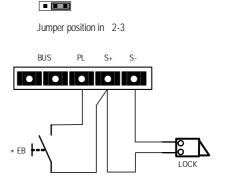

Door Lock Controlled with Dry Contact

Note:

- 1. The external power supply must be used according to the lock.
- The inside relay contact is restricted to AC or DC 24V/1A.
- 3. The jumper must be taken off before connecting.
- Setup the **Unlock Mode** of Monitor for different lock types.
 - Power-on-to-unlock type:Unlock Mode=0 (by default)
 - Power-off-to-unlock type:Unlock Mode=1

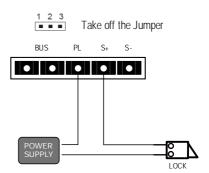

Unlock parameter setting(set on monitor)

- On main menu page, touch [Logo] icon to enter About page.
- When the screen stay in **About** page, press **MUNLOCK** button on front panel and hold for 2 seconds.
- · A keypad is shown.


Refer to the followings:



Note:


- 1.must connect DT611(F)/ID correctly before setting.
- 2.the parameter will be saved in DT611(F)/ID automatically, so you need only set on one monitor.

Multi Door Stations Connection

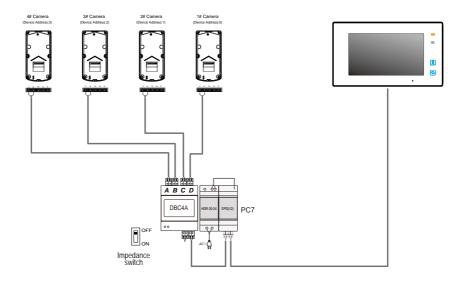


Multi Monitors Connection

Basic IN-OUT Wiring Mode

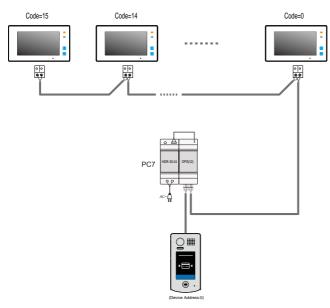

With DBC4A Wiring Mode

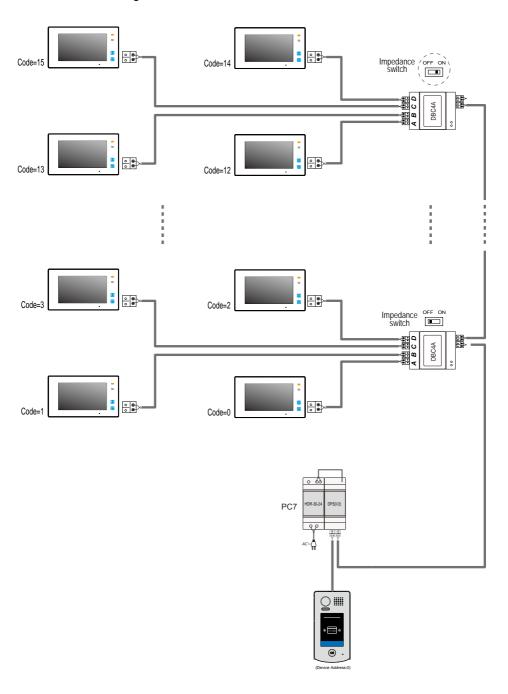

5. ID Card Registration

Introduction:


- Up to 320 user cards can be registered by the door station.
- Easy management with LED status and sound hints.
- There are two master cards, one <u>MASTER CARD ADD</u> card and one <u>MASTER</u>
 <u>CARD DELETE</u> card, When registered new master cards, the old master cards are invalid automatically.
- Card reading distance is from 3 to 5 cm.
- The master cards are necessary when you add or delete user cards. Please keep it well for future use.






Authorize master cards:

By default, there are two master cards marked <u>MASTER CARD ADD</u> and <u>MASTER CARD DELETE</u>, but you should know that the master card can be authorized by users at any time. That means any two user cards can be authorized to master cards, When registered new master cards, the old master cards are invalid automatically.

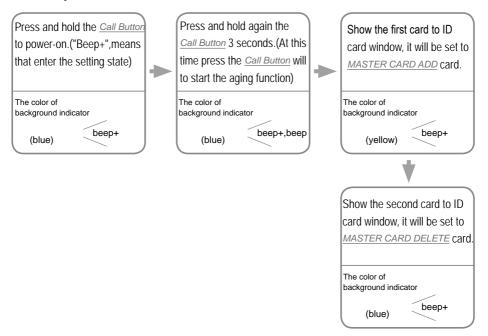


Notice:1.Each step above, press *Call Button* to exit the state of setting and start to call the monitor 2. it will return to standby mode if no operation within 10s.Or press *Call Button* to exit the state of setting and start to call the monitor.

Add User Cards:

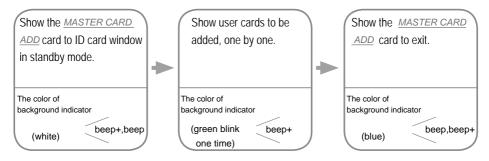


Notice:it will return to standby mode if no operation within 10s .Or press *Call Button* to exit the status of setting and start to call the monitor.

Delete User Cards:

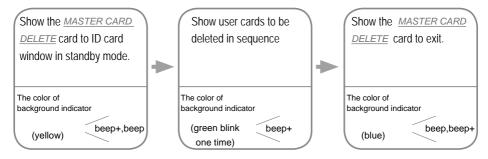

Notice:it will return to standby mode if no operation within 20s.Or press *Call Button* to exit the status of setting and start to call the monitor.

Access Initialization (delete all user cards):

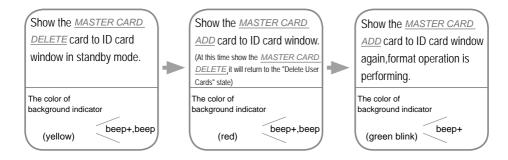

Notice: 1. Automatically returns to standby mode after FORMAT completed.

2.It will return to standby mode if no operation within 20s.Or press *Call Button* to exit the status of setting and start to call the monitor.

6. Unlock Operations


Unlocking of ID Card

When the registered user card has been shown to ID card window, the LED background indicator lights up, the buzzer sounds and the electric door strike is unlocked.



- 1. If show the authorized user card, the buzzer will sound of beep+, and the LED background indicator will light up.
- 2. If show the unauthorized user card, the buzzer will sound of beep, beep, beep.

7.ID Settings of Door Station

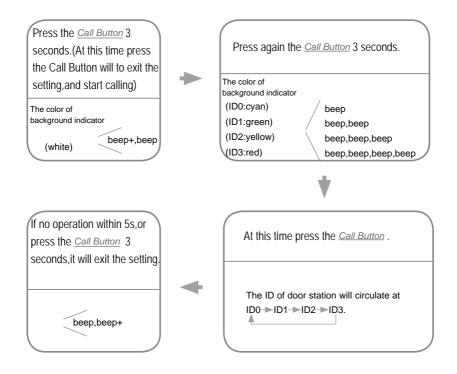

8. Precautions

- Please clean the unit with soft cotton cloth, don't use the organic impregnant or chemical clean agent. If necessary, please use a little pure water or dilute soap water to clean the dust.
- The unit is weather resistant. However do not spray high pressure water on access control keypad directly. Excessive moisture may cause problems with the unit.
- · You must use the right adaptor which is supplied by the manufacture or approved by the manufacture...
- Pay attention to the high voltage inside the products, please refer service only to a trained and qualified professional.

9. Specifications

• Power Supply : DC 24V ;

Power Consumption: Standby 15mA; Working status 105mA;

Camera: Color CMOS, 2.0 Mega pixel

1/2.7" fisheye camera,170° wide angle;

Color ARS: 420 TV Lines:

Unlocking time: 1~99s

Lock Power supply: 12Vdc, 280mA(Internal Power);

Number of relay circuits:
2(the second lock need external device to support)

Mounting: Surface mounting(DT611/ID)

Flush mounting (DT611F/ID)

Working temperature: -15°C ~ +55°C
Wiring: 2 wires,non-polarity

• Dimension: 182(H)×93(W)×44(D)mm(DT611/ID)

220(H)×120(W)×50(D)mm(DT611F/ID)

10. Cables Requirements

The maximum distance of the wiring is limited in the DT system. Using different cables may also affect the maximum distance which the system can reach.

